



Frese DPRV

- DK **Montagevejledning**
- DE **Montageanleitung**
- EN **Mounting instructions**
- ES **Instrucciones de montaje**


Danmark · Tlf. +45 58 56 00 00
 Deutschland · Tel. +49 (0)241 475 82 333
 UK · Tel. +44 (0)1704 896012

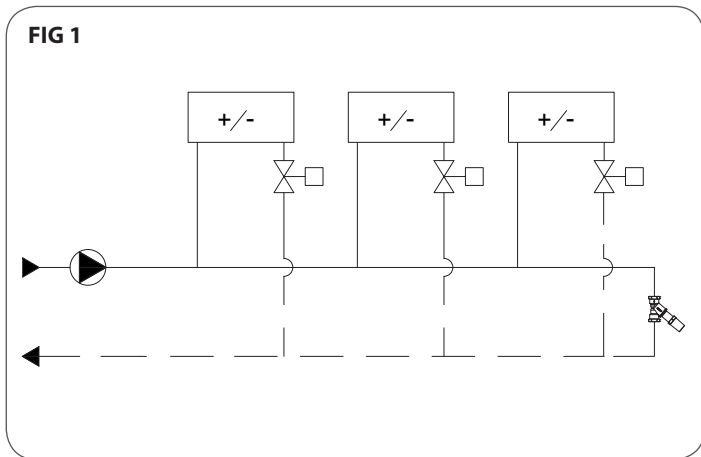


- DK Skitse af varmesystem med Frese DPRV
- DE Skizze eines Heizungssystems mit Frese DPRV
- EN Outline of a heating system with Frese DPRV
- ES Esquema de un sistema de calefacción con Frese DPRV

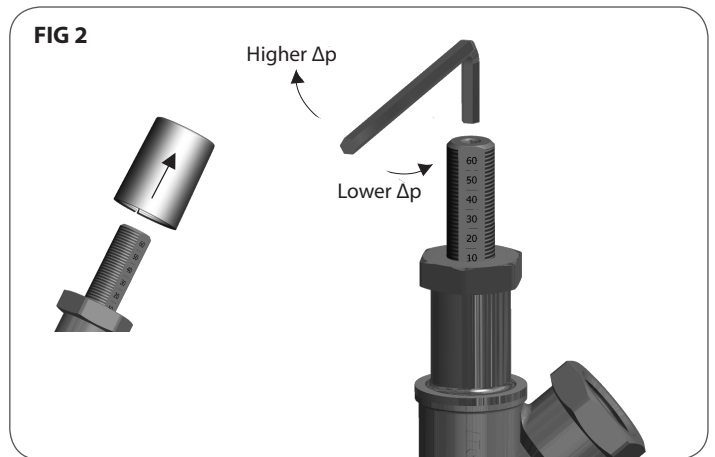


- DK Ventilen indstilles nemt vha. en 4 mm sekskant nøgle. Differenstrykket indstilles ud fra skalaen. Ved afspærring skrues skalaen helt i bund med et moment på 1,5 Nm.
- DE Der Regler lässt sich leicht mit Hilfe eines 4-mm Sechskantschlüssel einstellen. Der Differenzdruck wird anhand der Skala eingestellt.
- EN The valve is easily set by means of a 4mm hexagonal key. The differential pressure is set from the scale.
- ES La válvula se ajusta fácilmente utilizando una llave hexagonal de 4 mm. La presión diferencial se ajusta desde la escala.

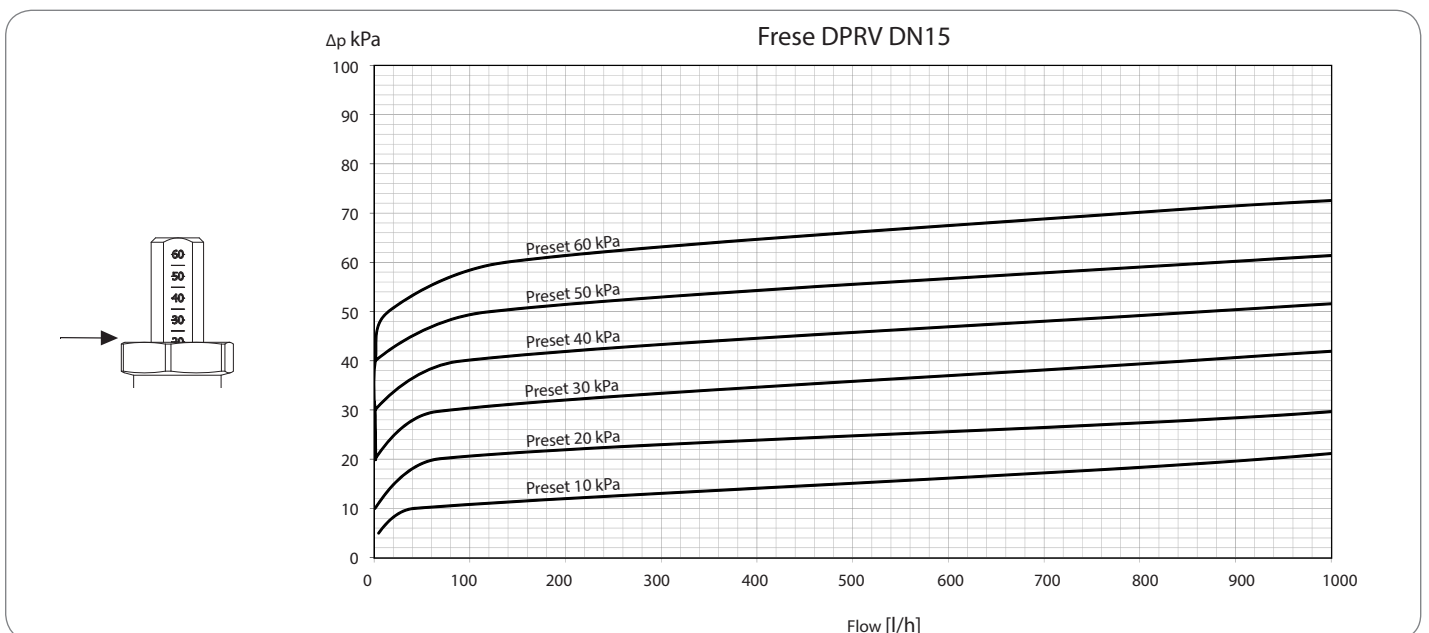

Frese DPRV DN20

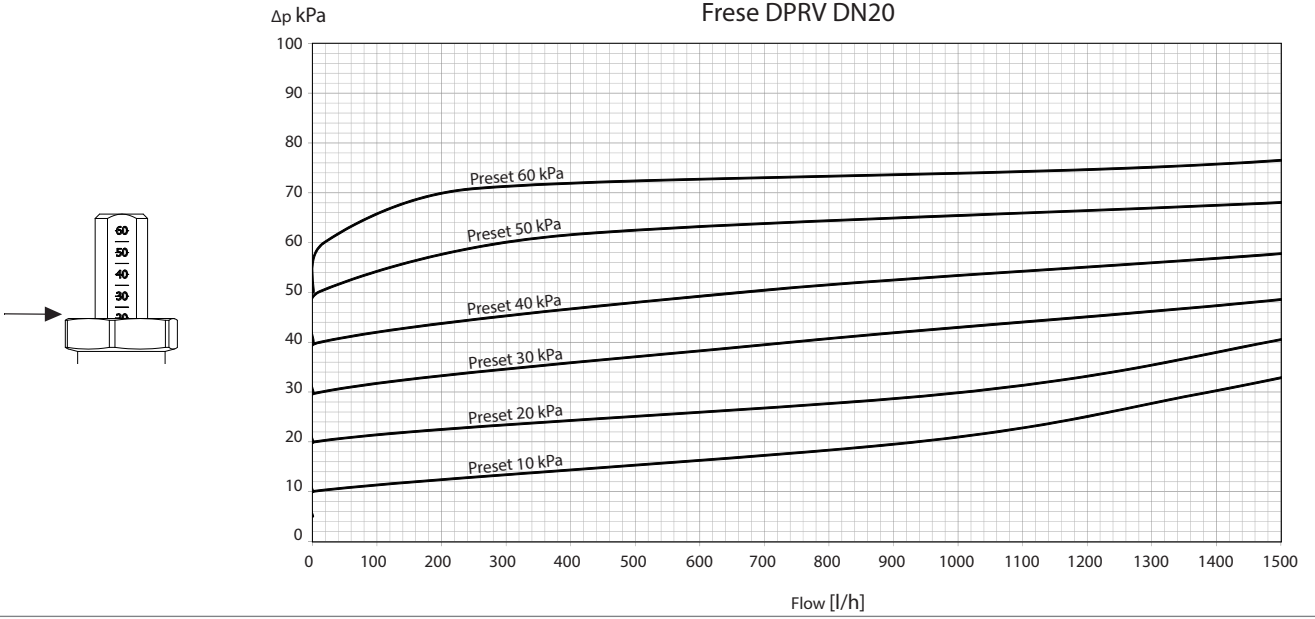

Frese DPRV DN25

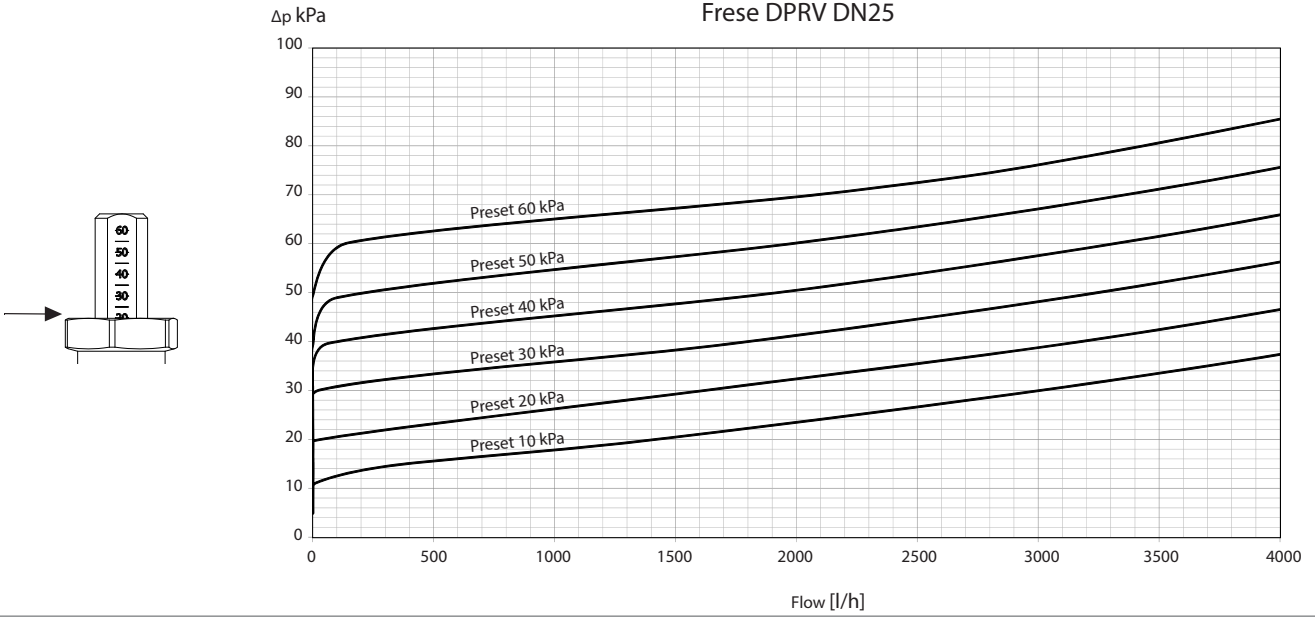

Frese DPRV DN32

