


Hurtig guide til den rigtige ventil for varmtvandsbeholder

Valg af ventil		
Hedeflade m ²	Indstilling	
0,70	0,9	VVS nr. 40 6747.304
0,75	1,0	
0,85	1,1	
1,00	1,3	
1,10	1,5	
1,70	2,3	
2,00	2,8	
2,5	3,5	
3,00	4,0	

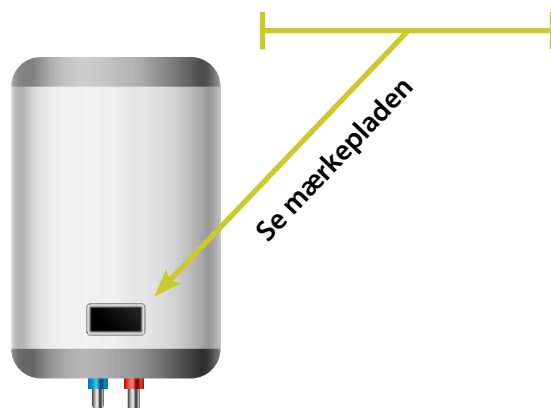

DN15 100 til 575 l/h



Valg af termostat	
55° C	
Indstilles til ca. 5,5	VVS nr. 40 6748.930



Scan og download appen her:

